

www.scooterworks.com


COVERS FOLLOWING FRONT RACK
FRC-1/3
FRG1-C


FRONT RACK INCLUDES:

 6MM WINGNUTS x 2

 6MM NUTS x 4


 6MM WASHERS x 2

 SUPPORT ARM
PIVOT x 2




 RUBBER BRACKET
SLEEVE x 2

 ARM BRACKET x 2

 RACK BOOTS x 2

 ARM SUPPORT x 2

INSTRUCTIONS FOR INSTALLING FRONT RACK

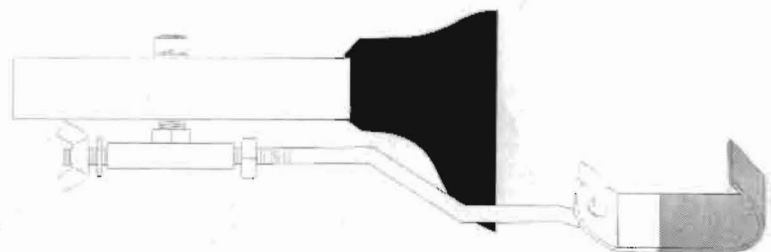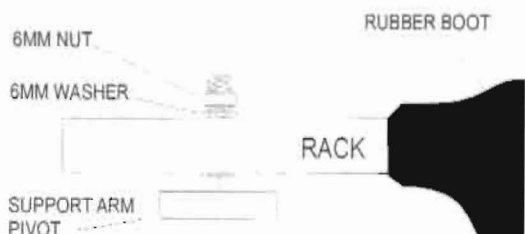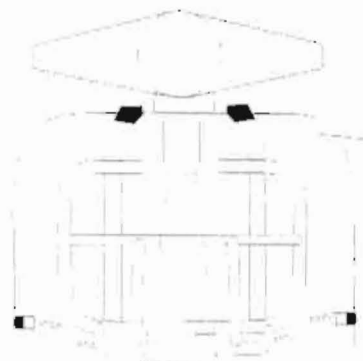

1. INSTALL THE TWO BLACK BOOTS ON THE BOTTOM OF THE RACK. (MAKE SURE THEY ANGLE DOWN). YOU CAN ALSO INSTALL THE RUBBER SLEEVES ON THE SIDE BRACKETS, USING WINDOW CLENER OR WARM SOAPY WATER WILL MAKE IT EASIER!

2. INSTALL RACK. THE TWO HOOKS ON THE TOP OF THE RACK SHOULD HOOK ON TO THE TOP OF YOUR SCOOTER LEG SHIELD.

3. INSTALL THE TWO ARM PIVOTS ONTO THE RACK. THE THREADED PART SHOULD BE ON TOP. INSTALL 1 WASHER AND ONE 6MM BOLT. (YOU DO NOT NEED TO TIGHTEN THEM DOWN ALL THE WAY JUST YET)

4. NEXT ASSEMBLE THE SUPPORT ARMS. IN THE ORDER AS SHOWN

5. TIGHTEN THE WING NUTS UNTIL SNUG. MAKE SURE RACK IS CENTERED, THEN TIGHTEN THEM DOWN EVENLY.